



#### Three levels user parameter menus satisfy different user requirements

Simple menu、Custom menu、Engineering menu,convenient for different customer to use.



#### Full power rating and compact volume

Volume reduced by 20% comparing to same power rate drive of competitors.



#### Excellent motor control performance

Sensorless Vector Control technology, responding load changing rapidly, good torque capacity in low frequency, strong overload capability.



# Multipurpose protect cover plate, innovative water-drop proof design for exhaust hole

Top optional protective cover, against dust and object; Professional exhaust hole design, prevent water-drop from entering the machine at 15°.



#### Higher reliability

PCB coating design fit for dust environment; aging-resistant and temperature testing progress make it more reliable



#### Global AC input voltage classes

Operating voltage range: single-phase 230V ( $\pm$ 15%), 50/60Hz; three-phase 380V (-15%) ~ 440V (+15%),50/60Hz.

# **Table of Contents**

Product Overview	P-01
Designation	P-02
Main Parameters and Technical Performance	P-03
Product Appearance and Control Panel	P-04
Product Installation Size and Weight	P-06
Standard Product Wiring Diagram	P-07
Terminal Function Description	P-08
Annex	P-09

### **Product Overview**









#### **Overview**

#### **Application range**

 NVF5 series universal inverter adopts a vector control technique without speed sensors, featuring small size, light weight, easy operation, and excellent performance.
 It's widely used for various small and medium machineries, such as those for air conditioning, cooling, building water supply, logistics, and ceramics.


#### Main parameters

- Rated operating voltage (V): single-phase 230V ( $\pm 15\%$ ), three-phase 380V (-15%)  $\sim 440V (+15\%)$
- Input frequency range (Hz): 47~63Hz
- Output frequency range (Hz): 0Hz~400Hz
- Control method: Vector control without PG, V/F control, torque control
- Start torque: 150% of rated torque at 0.5Hz
- Overload capacity: 150% of rated current for up to 1minute, and 180% of rated current for up to 2 seconds
- Speed range:Open-loop vector control 1:100; V/F 1:50
- Speed control accuracy: open-loop vector control ±0.5% of peak speed

#### Operating conditions and installation conditions

Туре	Operating conditions and installation conditions
Temperature	Operating temperature: -10°C ~ +45°C, 1% derating for every degree between 45~50°C
Humidity	Air relative humidity ≤95%, non-condensing
Elevation	Rated power output of the inverter at an elevation below 1000m. Beyond this elevation, 10% derating is applied for each additional 1000m.
Shock and vibration	The inverter should not fall or be suddenly impacted. Do not install it in a site subject to frequency vibrations.
Protection against water and water vapor	Do not install it in a site that may be exposed to water spray or dew.
Electromagnetic radiation	Please keep it away from electromagnetic radiation sources.
Atmospheric pollution	Do not install it in a site with atmospheric pollution such as dust powder or corrosive gas.
Storage environment	Do not install it in a site with direct sunlight, oil mist, steam, or vibration.

### Designation

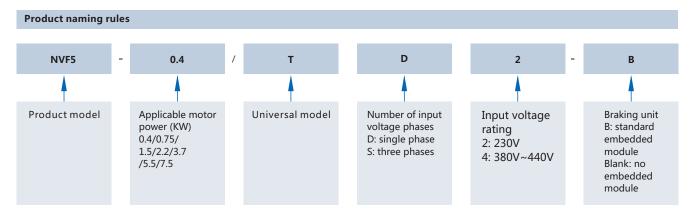

#### NVF5 series inverter selection table

Power voltage	Catalog Number	Power capacity (kVA)	Rated input current (A)	Rated output current (A)	Maximum applicable motor (KW)	Braking unit
	NVF5-0.4/TD2	1.0	5.4	2.5	0.4	Optional embedded
	NVF5-0.4/TD2-B	1.0				
	NVF5-0.75/TD2	1.9	10.3	5	0.75	
Single phase AC 230V	NVF5-0.75/TD2-B	1.9				
Siligle phase AC 250V	NVF5-1.5/TD2	2.9	15.5	7.5	1.5	
	NVF5-1.5/TD2-B	2.9	7.5	1.5	unit	
	NVF5-2.2/TD2	4.2	20	10	2.2	
	NVF5-2.2/TD2-B	4.2				
	NVF5-0.4/TS4-B	0.8	2.3	1.5	0.4	
	NVF5-0.75/TS4-B	1.5	3.4	2.7	0.75	
Three phase AC 380V~440V	NVF5-1.5/TS4-B	3.0	5.1	4.2	1.5	
	NVF5-2.2/TS4-B	4.0	6.6	5.8	2.2	Standard
	NVF5-3.7/TS4-B	5.9	12.1	10.5	3.7	embedded unit
	NVF5-5.5/TS4-B	8.6	13.1	13	5.5	
	NVF5-7.5/TS4-B	11.0	22.2	17	7.5	

### **Main Parameters and Technical Performance**

#### **Technical specification**

Item		Specification			
Voltage range		Single-phase 230V (±15%)			
Input	Voltage range	Three-phase 380V (-15%)~440V (+15%)			
Frequency range		(47~63) Hz			
	Voltage	0~rated input voltage			
Output	Frequency	(0~400) Hz			
	Overload capacity	150% of rated current for up to1minute, and 180% of rated current for up to 2 seconds			
	Control mode	SVC control, V/F control, torque control			
	Start torque	SVC control: 150% of rated torque at 0.5Hz			
	Start torque	V/F control: 100% of rated torque at 1Hz			
	Carrier frequency	1kHz~15kHz			
Main control	Speed range	SVC: 1:100; V/F: 1:50;			
function	Speed control accuracy:	Vector without PG: ±5% of peak speed			
	Frequency resolution	Digital setting: 0.01Hz; analog setting: maximum frequency×0.5%			
	V/F curve	Linear V/F curve; (2, 1.7, 1.2, multi-point) power reduced torque curve			
	Acceleration / deceleration curve	4 types of linear acceleration / deceleration curve; S-curve acceleration / deceleration			
Distinct feature	s	Over-current stall protection, over-current stall protection, torque limit, speed tracking, simple PLC, process PID, preset speed control, automatic slip compensation, automatic torque boost, pre-flux function, instant power cut function			
	Digital input	5 multifunctional digital programmable input (including 1 circuit of high-speed pulse input terminal)			
	Digital output	1 multifunctional digital programmable output (speed up to 100kHz)			
	Analog input	2 analog signal input, (0~20)mA, (4~20)mA current signal input or (0~10)V, (-10~+10)V voltage signal input can be selected			
	Analog output	1 analog signal output, (0~20)mA, (4~20)mA current signal output or (0~10)V, (-10~+10)V voltage signal output can be selected			
Peripheral interface	Relay output	A pair of NO contacts and a pair of NC contacts, contact capacity: 3A/250V			
	Communication interface	Standard RS485 communication. Can be extended with communication protocols such as ETHERNET, PROFIBUS-DP, or CANOPEN. External operation panel can be connected;			
	Braking function	Embedded braking unit is optional for single-phase models, and standard for three-phase models.			
	Operation panel	Display of over 20 parameters including frequency setting, output frequency, output voltage, and output current.			
Protection function		Protections against over-current, over-voltage, under-voltage, overheat, overload, input phase loss, output phase loss, load loss, and motor ground short circuit.			
St	Protection degree	Standard IP 20, IP 22 with optional top protective cover			
Structure Cooling method		Fan cooling			
Material		Full series of molded case structure			
Installation me	ethod	DIN rail type and wall type installation for models ≤2.2kW (only wall installation is available for single-phase 2.2kW models); wall type installation for models > 2.2kW			

## **Product Appearance and Control Panel**

#### Name and functions of different parts



## **Product Appearance and Control Panel**

#### **Control panel**




Table 4.1 Functional definition of keys

Key	Functional description
	Press and hold the PRG/S key until the flashing status changes to switch the function.
(PRG/S)	PRG function: Enter or exit a parameter group in parameter configuration state. Shift function: Change the position during menu editing. Cyclic left shift: Change displayed parameter in main screen.
RUN	Run key
STOP	Stop key in normal status and reset key in fault status.
	Increment key (can be used to change group number, index number, and parameter value). After energization of the inverter, ▲key can be used to directly increase the frequency setting. The frequency change rate while the key is held is dependent on F0.12.
	Decrement key (can be used to change group number, index number, and parameter value). After energization of the inverter, $\P$ key can be used to directly change the frequency setting. The frequency change rate while the key is held is dependent on F0.12.

Key	Functional description	
PRGIS + SET	Menu mode selection (F7.1 1. Simple menu mode (U-1) 2. Custom menu mode (U-2 3. Engineering menu mode	); 2);
(PRGIS) + (A)	The system is at main interface	Lock key
PKGIS T	In Level 1 menu in custom menu mode	Add custom parameters
(PRGIS) + (V	The system is at main interface	Unlock key
PKSIS) T	In Level 1 menu in custom menu mode	Delete custom parameters
	1	

# Product installation size and weight


#### Product installation size and weight

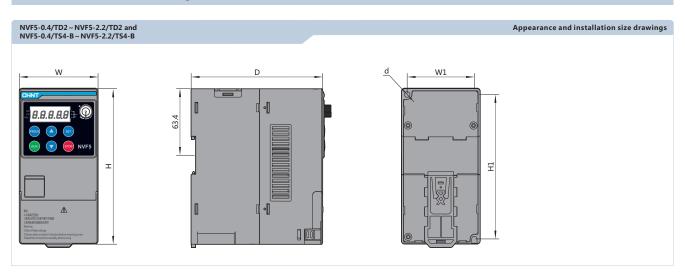


### NVF5-3.7/TS4-B ~ NVF5-7.5/TS4-B





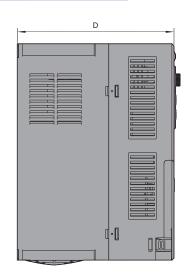

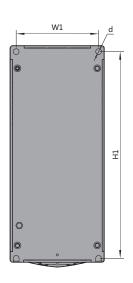


#### Installation size and product weight (unit: mm)

Product specification	w	н	D	W1	н1	Installation hole d	Weight kg
NVF5-0.4/TD2							
NVF5-0.4/TD2-B		148	125.2	64	137.5	Ф5.3	1.2
NVF5-0.75/TD2	75						
NVF5-0.75/TD2-B	75						
NVF5-1.5/TD2							
NVF5-1.5/TD2-B							
NVF5-2.2/TD2	75	148	146.7	64	137.5	Ф5.3	1.25
NVF5-2.2/TD2-B	75	140	146.7	04	157.5	Ψ5.5	1.25
NVF5-0.4/TS4-B							
NVF5-0.75/TS4-B	75	148	125.2	64	137.5	Ф5.3	1.03
NVF5-1.5/TS4-B	75						
NVF5-2.2/TS4-B							
NVF5-3.7/TS4-B	- 89.5	206	149.2	78.5	196.8	Ф5.5	1.79
NVF5-5.5/TS4-B							
NVF5-7.5/TS4-B	118	216	163.4	105	205	Ф6	2.78

## **Standard Product Wiring Diagram**

#### **Standard Product Wiring Diagram**

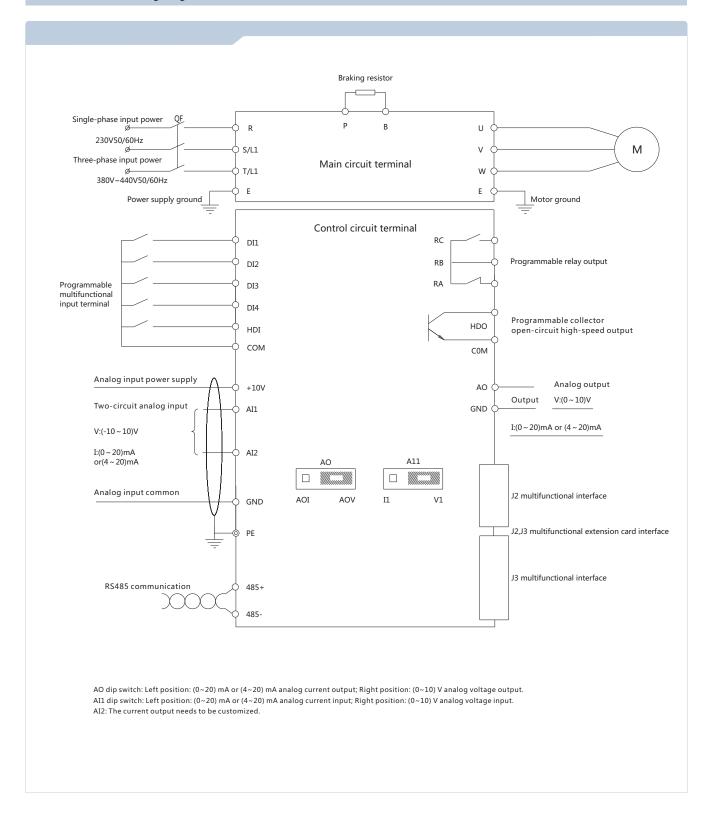



## **Terminal Function Description**

#### Control circuit terminal description

Туре	Terminal imprint	Name	Terminal function description	Specification		
Power	+10V	+10V power supply	Drive supplied +10V power supply	Maximum output current is 5mA		
supply	GND	+10V power ground	Analog signals and +10V power reference ground	Electrically isolated from COM、CME		
Analog	AI1	Analog single-end input Ai1	Receive single-end input of analog voltage or current. The voltage/current input is selected with the dip switch on the control panel (reference ground: GND)	Input voltage range: (-10~+10) V (Input resistance: 45kΩ) Resolution: 1/4000		
input	AI2	Analog single-end input Ai2	Receive single-end input of analog voltage or current. Voltage input as default, can be customized depending on customer needs (reference ground: GND)	Input current range: (0~20) mA or (4~20) mA Resolution: 1/2000		
Analog output	AO	Analog output	Provide analog voltage/current output. The output voltage and current are selected with the dip switch on the control panel. The factory default setting is voltage output. See description about functional code F6.11 (reference ground: GND)	Voltage output range: (0~10) V Current output range: (0~20) mA or (4~20) mA		
Communi-	485+	DC405	Positive end of 485 differential signal	Positive end of 485 differential signal		
cation	485-	RS485 communication interface	Negative end of 485 differential signal	Please use twisted pair cables or shielded cables		
	DI1	Multifunctional input terminal 1				
Multifun-	DI2	Multifunctional input terminal 2		Optical coupling isolated input impedance:		
ctional	DI3	Multifunctional input terminal 3	Can be programmed as switch input terminals with multiple functions.	R = $3.3k\Omega$ ; X1- $\infty$ 6 highest input frequency: 200Hz; The highest input frequency is 100kHz when HDI is used as the high-speed impulse input:		
input terminal	DI4	Multifunctional input terminal 4	The switch input terminals (F5 group) provide functional description about F5.01~F5.07 input terminals.			
	HDI	Multifunctional input terminal HDI (pulse input)	Code 15.02 15.07 input terminals.	The input voltage is (+20~+24)V if external power is used (common end: COM)		
Multifun- ctional	HDO	Open-circuit collector pulse	Can be programmed as switch output terminals with multiple functions. The switch output terminals (F6 group) provide functional description about F6.02 output terminals (common end: COM)	Output frequency range: depending on F6.18, 100kHz at most		
Power	+24V	+24V power supply	External +24V power supply	Maximum output current: 100 mA		
supply	СОМ	+24V power common end	Reference ground of +24V power supply	COM and GND internal isolation		
	RA			RA-RB: NC RB-RC: NO		
Relay output terminal	output RB	Relay output	Can be programmed as relay output terminals with multiple functions.  The switch output terminals (F6 group) provide functional description about F6.03 output terminals.	Contact capacity: NO 5A /NC 3A 250V(AC) See F6 for use method.		
RC				The over-voltage level of input voltage at the relay output terminal is II.		

#### Main circuit terminal wiring description

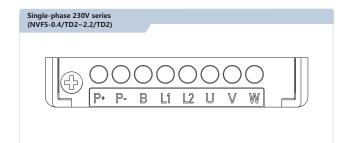

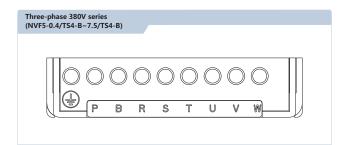

#### Main circuit terminal functional description

Terminal symbol	Terminal name and description
R、S、T	AC power supply input terminal, connected to three-phase power frequency supply 380V~440V
L1、L2	AC power supply input terminal, connected to single-phase power frequency supply 230V
P、B	Connected to braking resistor terminal (three-phase power frequency supply 380V~440V)
P+、B	Connected to braking resistor terminal (single-phase power frequency supply 230V)
P-	Single-phase 230V series model DC bus negative voltage reference terminal
U、V、W	AC output terminal, connected to motor
Ţ	Ground terminal, for grounding of inverter

#### Annex 1. Peripherals

